

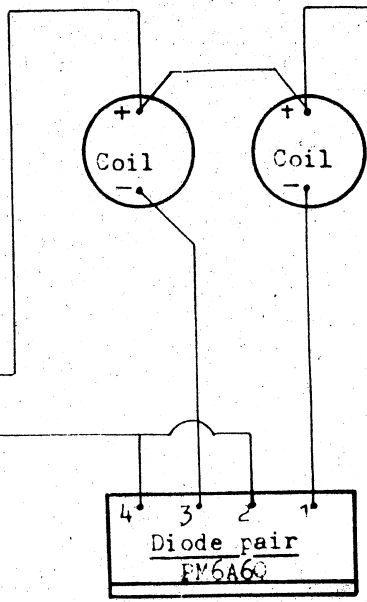


EXISTING FEED
TO COILS
(WHITE-RED USUALLY)

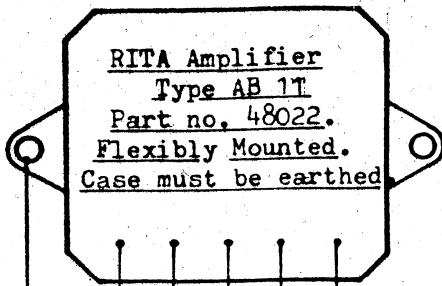


white-yellow
white-black

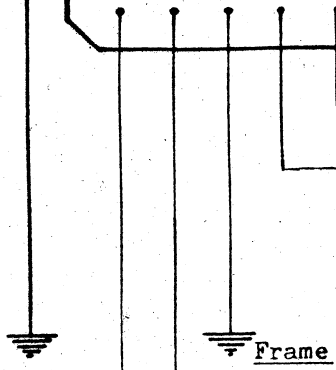

white-purple
white-orange

5 mm. Approximate firing position
at full advance. Check
stroboscopically at
maximum R.P.M.

0.2-0.3mm. Air gap.
Set with feeler gauges.
Check both positions.

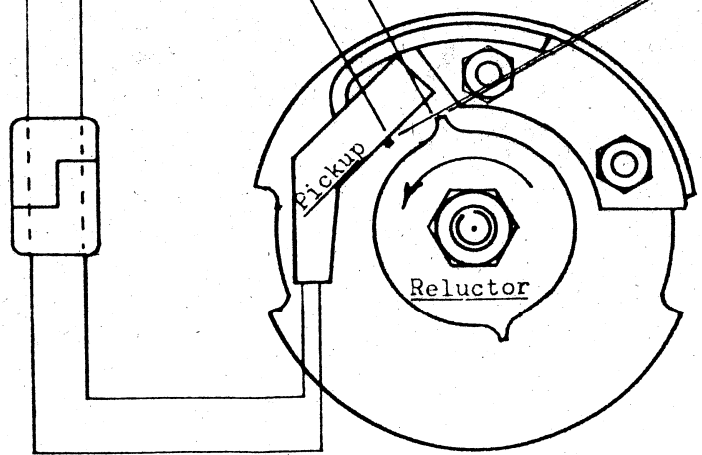

Note
The amplifier can be damaged if the h.t. voltage does not go to earth.
Therefore do not exceed a 5mm. air gap when testing coil H.T. output.